



DRIFTBOARD™
BY PERMATIMBER®

DRIFTBOARD RANGE INSTALLATION GUIDE

1300 366 938 | permacomposites.com

v2 13112023


CUTTING

PermaTimber® DriftBoard™ panels can be cut along their width and length using basic wood working tools. (i.e. jigsaw with a fine-tooth blade or a fine-tooth drop saw). When measuring for cutting, allow 1mm per 1m length for expansion and contraction of panel across the end of each b

INSTALLATION STEPS


STEP ONE

Before beginning the installation process, ensure that the surface where you intend to mount the DriftBoard™ is clean and free from dust, dirt, or any other contaminants. Use a suitable cleaning solution and a clean cloth to wipe the surface thoroughly. This step is crucial for achieving a secure and long-lasting bond.

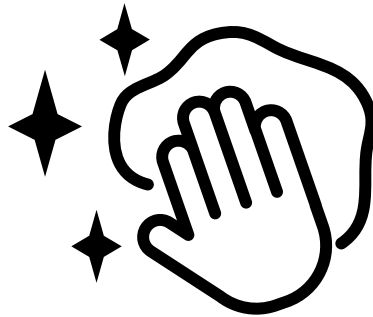

STEP TWO

Peel backing, align the DriftBoard™ with the desired position on the wall. Gently press the board against the surface, applying even pressure to ensure a strong bond. Take care to position it accurately, as the adhesive may provide limited repositioning capabilities.

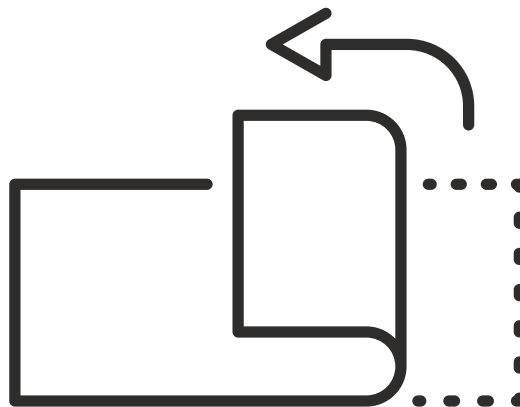

Options:

DriftBoard™ is designed to accommodate high-performance advanced polymer construction adhesive for a secure and lasting bond. Alternatively, screws can be employed for installation.